



### MCC SIZING FORM

<b>SUB STATION</b>	50B		
<b>DATE</b>	SEPT 20/96		
<b>REV.</b>	0		
DESCRIPTION	QYT	SPACE FACTOR	TOTAL SPACE FACTOR
TRANSFER SWITCH-600 AMP	2	2.0	4.0
30 A DISCONNECT		1.0	0.0
30 A DISCONNECT -DUAL	17	0.5	8.5
60 A DISCONNECT		1.0	0.0
60 A DISCONNECT -DUAL	15	0.5	7.5
100 A DISCONNECT		1.0	0.0
100 A DISCONNECT -DUAL	4	0.8	3.2
200 A DISCONNECT	10	2.0	20.0
400 A DISCONNECT		3.0	0.0
SIZE 1 FVNR	46	1.0	46.0
SIZE 1 FVR		1.5	0.0
SIZE 2 FVNR	19	1.0	19.0
SIZE 2 FVR		1.5	0.0
SIZE 3 FVNR	9	2.5	22.5
SIZE 4 FVNR	8	3.0	24.0
SIZE 5 FVNR	10	4.0	40.0
INCOMING -TOP	6	2.0	12.0
INCOMING -BOTTOM		2.0	0.0
<b>TOTAL SPACES</b>			206.7
<b>TOTAL # OF MCC SECTIONS C/W 25% SPARE SPAC</b>			45.9
<b>SECTIONS PER MCC</b>			8.0
<b>NUMBER OF MCC'S</b>			5.7